


## Operating instructions

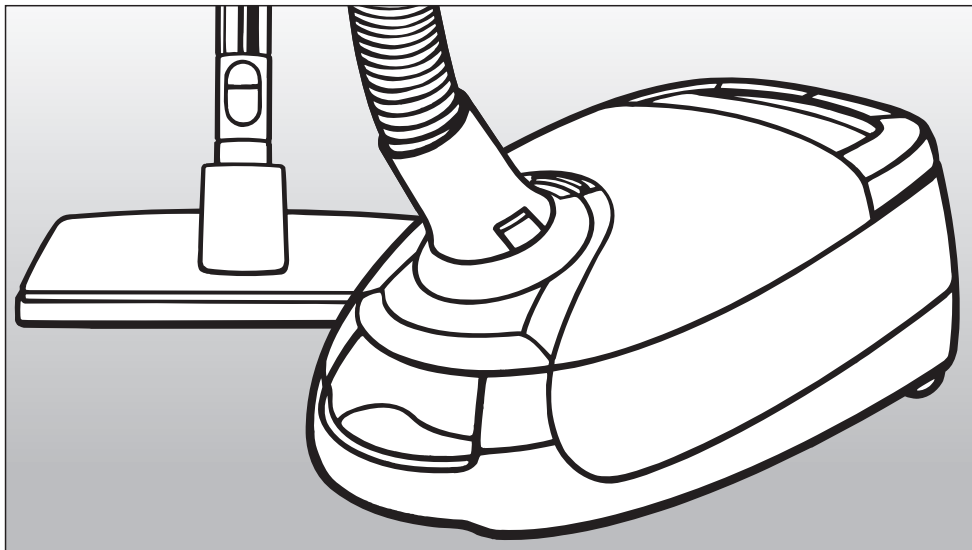

## Vacuum cleaner S 5980

These operating instructions apply to standard model S 5980 and to Special Edition models which are distinguished by names rather than models.



M.-Nr. 06 829 980

# Contents

---

<b>Caring for the environment</b> . . . . .	3
<b>Description of the appliance</b> . . . . .	4
<b>Warning and Safety instructions</b> . . . . .	6
<b>Preparing for use</b> . . . . .	9
<b>Accessories supplied</b> . . . . .	13
<b>Using the accessories supplied</b> . . . . .	14
<b>Use</b> . . . . .	16
Mains cable . . . . .	16
Switching on and off . . . . .	16
Adjusting the suction power . . . . .	17
Switching the Electrobrush on and off . . . . .	18
<b>Setting down, transportation and storage</b> . . . . .	19
<b>Maintenance and care</b> . . . . .	21
Purchasing new dustbags and filters . . . . .	21
Ordering the correct dustbags and filters . . . . .	21
When to change the dustbag . . . . .	22
Replacing the dustbag . . . . .	23
When to change the dust compartment filter (for motor protection) . . . . .	24
How to change the dust compartment filter . . . . .	24
When to change the exhaust filter . . . . .	25
Replacing the Active HEPA filter . . . . .	26
Replacing one type of exhaust filter with another . . . . .	27
When to change the thread lifters . . . . .	28
To replace the thread lifters . . . . .	28
<b>Cleaning and care</b> . . . . .	29
<b>Problem solving guide / After sales service</b> . . . . .	30
<b>Optional accessories</b> . . . . .	31
<b>Electrical connection for the UK</b> . . . . .	35

## Disposal of packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic, wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.


Rather than just throwing these materials away, please recycle them.

## Disposing of the dustbag and filters

These are made from environmentally friendly materials, and can be disposed of with the normal household waste, as long as they have been used exclusively for general household dust.

## Disposal of your old appliance


Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

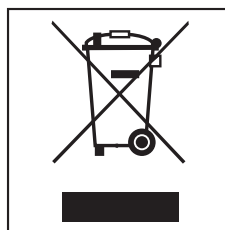

Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.


It should be unplugged or disconnected from the mains electricity supply by a competent person. The plug must be rendered useless and the cable cut off directly behind it to prevent misuse. See the "Warning and Safety" section of this booklet for further details.

# Description of the appliance

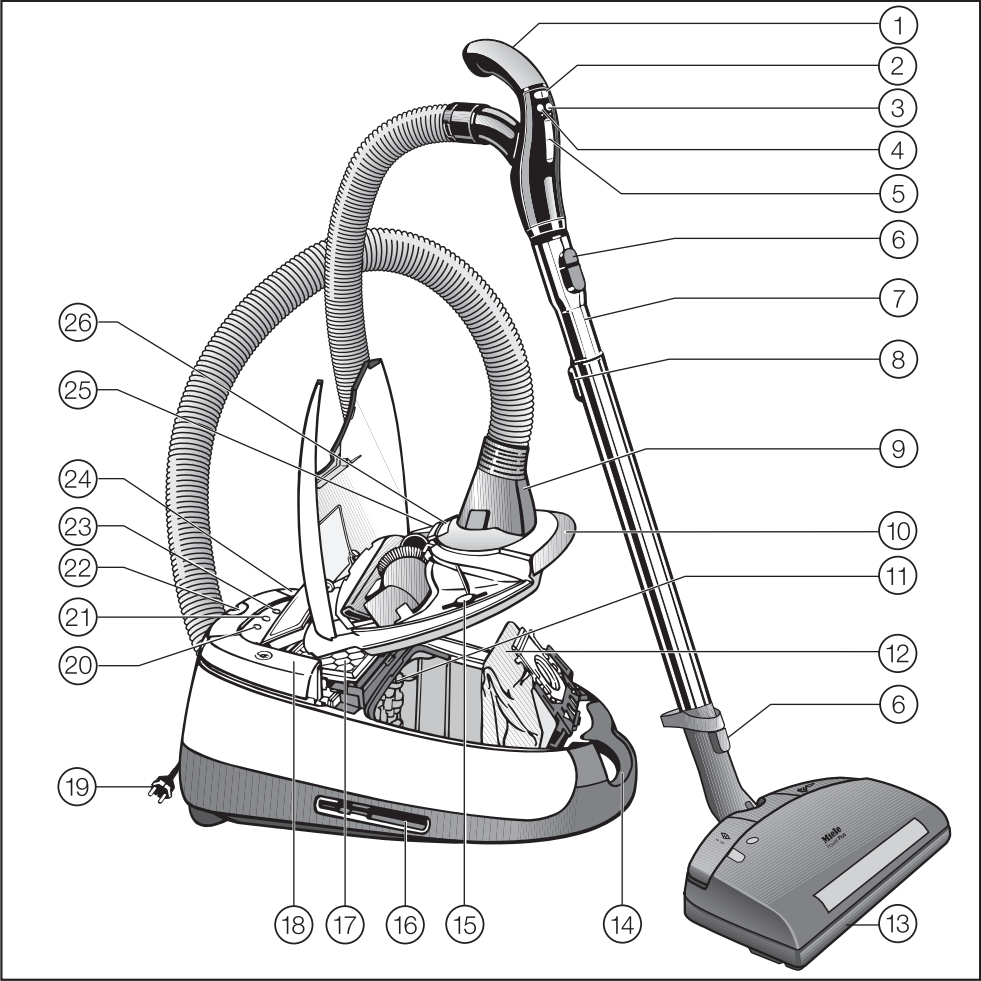

## Description of the appliance

---

- ① Handle
- ② Suction power selector + / -
- ③ On/Off control for Electrobrush with LED
- ④ Stand-by button for pauses in vacuuming with LED
- ⑤ Display for power settings
- ⑥ Release button
- ⑦ Electro telescopic tube
- ⑧ Electro telescopic tube release button
- ⑨ Connection socket
- ⑩ Dust compartment release button
- ⑪ Dust compartment filter (for motor protection)
- ⑫ Dustbag
- ⑬ Electrobrush (either SEB 217 or SEB 236, depending on model)
- ⑭ Carrying handle
- ⑮ Electrobrush socket cover holder
- ⑯ Parking attachment (on both sides of vacuum cleaner)
- ⑰ Active HEPA filter
- ⑱ Foot switch for automatic cable rewind
- ⑲ Mains cable
- ⑳ Exhaust filter change indicator and re-set button
- ㉑ Overheating warning light 
- ㉒ Parking system
- ㉓ Stand-by indicator
- ㉔ On/Off foot control ①
- ㉕ Release button for accessories compartment
- ㉖ Dustbag change indicator

# Warning and Safety instructions

---

This appliance meets statutory safety requirements. To avoid the risk of personal injury or damage to the appliance you should read these operating instructions carefully before using it for the first time. They give important information on the safety, operation and care of the appliance. Please keep these operating instructions in a safe place for reference, and pass them on to any future users.

## Correct use

This vacuum cleaner must only be used for domestic household purposes to vacuum **dry** floor surfaces. Do not use on people or animals. Any other usage, modification or alteration is at the owner's risk and could be dangerous. The manufacturer cannot be held liable for damage resulting from improper or incorrect use of the appliance.

## Safety with children

This appliance is not a toy! To avoid the risk of injury do not allow children to play on or near it, or to play with the controls. Supervise its use by older children and the elderly or infirm.

## Before using for the first time

Check the packaging, the vacuum cleaner and accessories for any signs of damage. Do not use a damaged appliance: it could be dangerous.

Ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. It is essential that they match to avoid damage to the appliance.

The plug must be fitted with a 13 A fuse (UK).

## Use

The electro suction hose and the electro telescopic tube contain electrical wires. Do not use the vacuum cleaner if these parts show any sign of damage. Danger of electric shock.

It is important to switch the vacuum cleaner off before changing over accessories and floorheads, especially an Electro- or Turbobrush.

To avoid the risk of damage, do not use the vacuum cleaner without the dustbag, dust compartment filter and exhaust filter in place.

If a dustbag is not inserted, the dust compartment cover does not normally close. Do not force it.

There is a metal inlay underneath the handle which is designed to protect the user from electrostatic discharges. Please make sure that you keep your hand in constant contact with this metal strip during vacuuming.

Do not vacuum up any water, liquid or damp dirt. This will cause major faults and could seriously impair the functioning and electrical safety of the appliance. Wait until any freshly cleaned or shampooed carpets or floor coverings are completely dry before attempting to vacuum.

# Warning and Safety instructions

---

■ Do not vacuum up anything which has been burning or is still glowing e.g. cigarettes, ashes or coal, whether glowing or apparently extinguished. The cleaner might catch fire.

■ Do not vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity. The filter system in the vacuum cleaner may not filter it completely, causing the toner to be blown back into the room by the fan.

■ Do not vacuum up any inflammable or combustible liquids or gases and do not vacuum in areas where such substances are stored. The cleaner might explode.

■ Do not vacuum up any sharp-edged objects. The electro suction hose can become blocked and damaged.

■ Floor attachments, accessories and tubes must not be used at head level to avoid the risk of injury, e.g. to eyes and ears.

■ Do not carry the appliance by the cable.

- Keep the cable away from sharp edges and do not let it be squashed at all, for example, under a door.
- Avoid running the vacuum cleaner over the cable.

A damaged cable, plug or socket is a safety hazard. The appliance must not be used if any of these have suffered damage.

■ Monitor the change dustbag indicator and change the dustbag if necessary. Check the exhaust and dust compartment filters at the same time and change them too if necessary. A full bag or blocked filter will reduce the suction power of the cleaner. A temperature limiter switches the vacuum cleaner off automatically if it gets too hot. See "Problem solving guide".

■ Do not use aroma capsules if your cleaner is fitted with an Active HEPA filter or an Active Air Clean filter. The active charcoal layer in the filter will absorb the aroma from the capsules rendering them ineffective.

## Using accessories

■ To avoid the risk of injury when vacuuming with a Miele Electrobrush or Turbobrush, do not touch the rotating roller brush.

■ The socket on the vacuum cleaner must only be used for the Miele Electrobrush specified for use with this appliance.

■ The Miele Electrobrush is a motor driven accessory for use only with Miele vacuum cleaners. The cleaner must not be used with an electrobrush produced by another manufacturer.

■ It is not advisable to vacuum directly with the handle, i.e. without an accessory attached as the rim could get damaged and you could hurt yourself on sharp edges.

# Warning and Safety instructions

---

■ Miele vacuum cleaner bags are disposable and intended to be used only once. Do not attempt to re-use. Blocked pores reduce the efficiency of the cleaner.

■ Use only Miele approved dustbags, filters and accessories. This will ensure optimum performance of the appliance throughout its life.

## Cleaning, maintenance and repairs

■ Always disconnect the vacuum cleaner from the mains supply when you have finished using it, as well as for maintenance work and cleaning. Switch it off at the wall socket and unplug it.

■ Do not let the vacuum cleaner get wet. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance there is the risk of an electric shock.

■ The electro suction hose and the electro telescopic tube contain electrical wires. The plug connectors must not come in contact with water. Do not attempt to clean them with a damp cloth. Danger of electric shock.

■ Repairs should only be carried out by a suitably qualified and competent person in accordance with national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

■ If the cable is damaged it should be replaced together with a complete cable rewind by a Miele service technician.

## Disposing of an old appliance


■ When disposing of an old appliance, cut the cable off the appliance as close to the cleaner as possible and cut the plug off. The plug cut from the cable should be rendered useless and then disposed of and on no account be inserted into any socket elsewhere in the house (electric shock hazard). Dispose of the appliance in a responsible manner.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.




### Attaching the electro suction hose

- Insert the hose connector into the socket until it clicks into position.

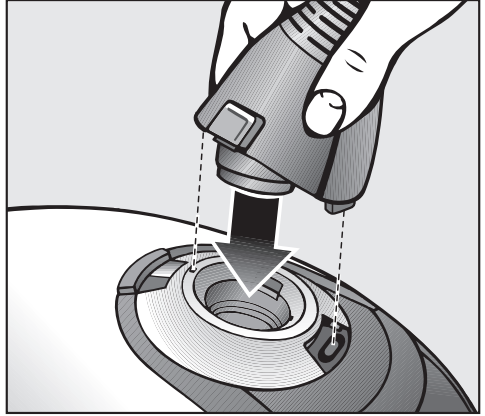

### Removing the electro suction hose from the cleaner

- Press the release buttons at the side of the hose connector, and lift the hose from the socket.

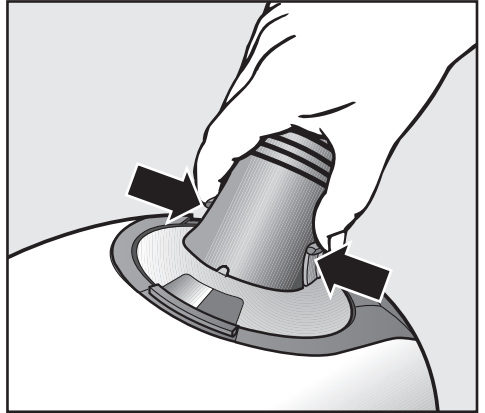


## Preparing for use

---

### Connecting the handle to the electro telescopic suction tube


- Insert the handle into the electro telescopic suction tube until it clicks into position.
- To release the handle from the suction tube, press the locking button (see arrow) and pull the handle away from the suction tube.

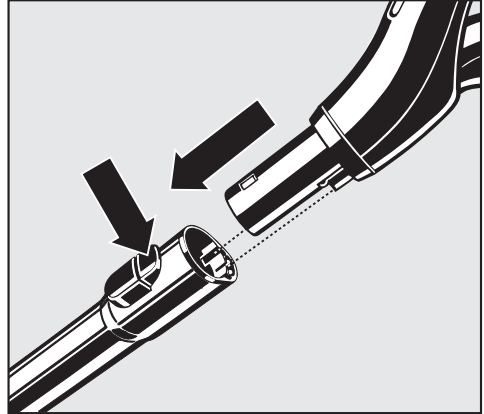

### Adjusting the electro telescopic suction tube

One part of the electro-telescopic tube is packed inside the other and can be adjusted to suit your height for comfortable vacuum cleaning.


- Press the telescopic tube release button (see arrow) to release the tubes and adjust to the required height. Then release the button to lock the tube in position.

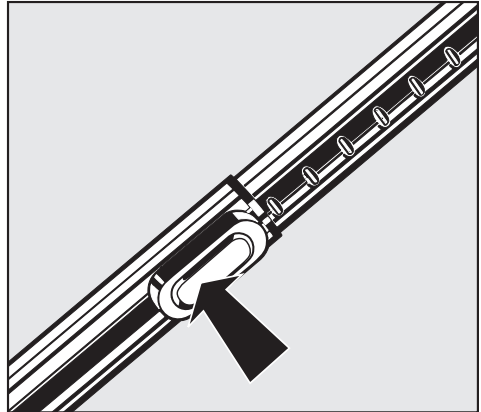


### Using the Electrobrush

Important: please observe the flooring manufacturer's cleaning and care instructions.

The Electrobrush is particularly suitable for intensive vacuuming of carpets which are subject to hard wear. It is very effective at removing deep seated dirt and preventing areas of frequent use being trodden into a path.


 Please note that the Electrobrush should not be used for vacuuming deep-pile rugs and carpets or valuable hand-knotted rugs and carpets, e.g. Persian and oriental rugs etc. There is a danger of the threads being pulled out. If in doubt, contact the carpet manufacturer/retailer.

 Do not use the SEB 217 Electrobrush to clean highly variable or uneven floors. The brush might come into contact with the floor and cause damage.

### Connecting the electro telescopic suction tube and the Electrobrush

- Insert the electro telescopic suction tube into the Electrobrush until it clicks into position.

For further information on use and maintenance please refer to the separate instructions supplied with the Electrobrush.

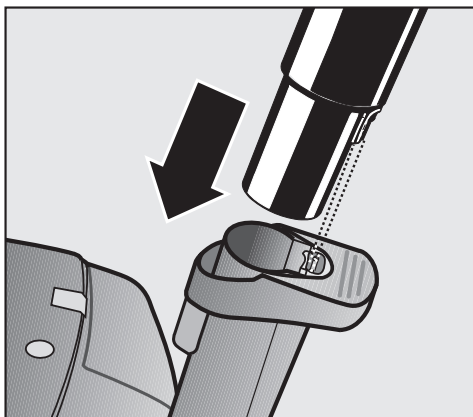

# Preparing for use


## Using the standard floorhead

Important: please observe the flooring manufacturer's cleaning and care instructions.

The floorhead can be used for all normal cleaning of carpets and rugs. It can also be used with the brush protruding to vacuum hard flooring. For hard flooring, such as stone and parquet, we recommend using one of the special Miele floor brushes (see "Optional accessories").


## Connecting the electro telescopic suction tube and the standard floorhead

- Fit the electro telescopic suction hose into the standard floorhead, and turn clockwise or anti-clockwise until they lock together with a click.
- To release the floorhead from the suction tube, press the locking button (see arrow in top illustration) and pull the suction tube away from the floorhead.

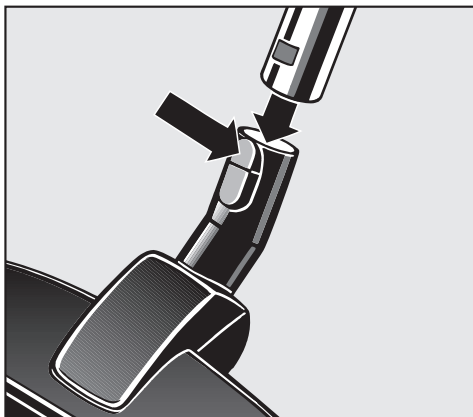


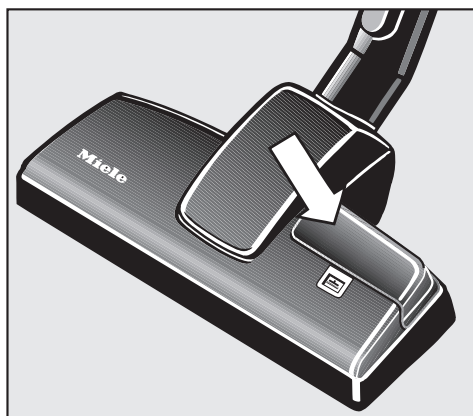
## Adjusting the standard floorhead

Vacuum carpets and rugs with the brush retracted:

- Press the foot control until the  symbol appears in the display.

Clean hard flooring which is not susceptible to scratching with the brush protruding:

- Press the foot control until the  symbol appears in the display.



## Accessories supplied

The following accessories are supplied:


- ① Crevice nozzle
- ② Dusting brush with natural bristles
- ③ Upholstery nozzle
- ④ Filter grille

You will need to fit the filter grille if you wish to replace the Active HEPA filter with a Super Air Clean filter (see "Maintenance and care - Replacing one type of exhaust filter with another").




### To open the accessories compartment

- Press the release button to open the accessories compartment lid.

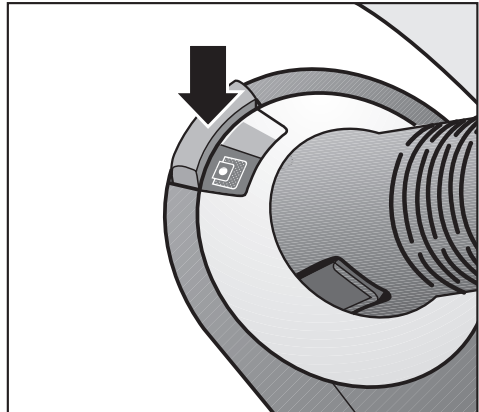

- Take out the accessory you require.
- Press down firmly on the lid to close it.

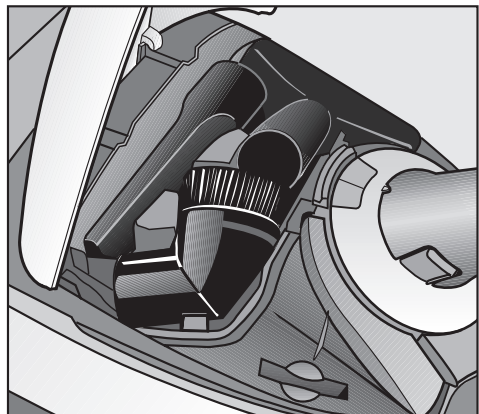


## Using the accessories supplied

---

### **Crevice nozzle**


For cleaning in folds, crevices or corners.

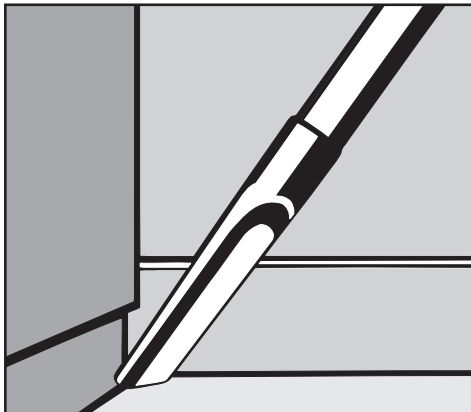

### **Dusting brush with natural bristles**

For cleaning skirting boards, ornate or carved articles, etc.

The head of the dusting brush can be swivelled to attain the best cleaning position.

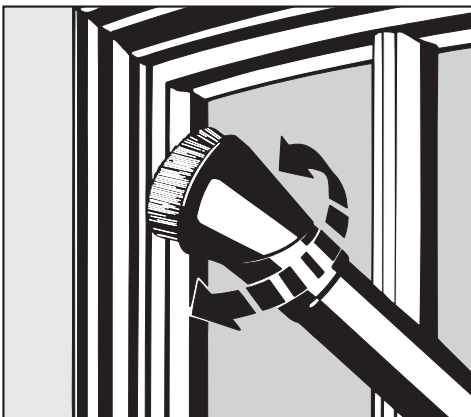

## Using the accessories supplied

---


### Upholstery nozzle

For cleaning upholstery, mattresses, cushions, curtains, covers etc.



### Floorhead

For general use and also for vacuuming the stairs.

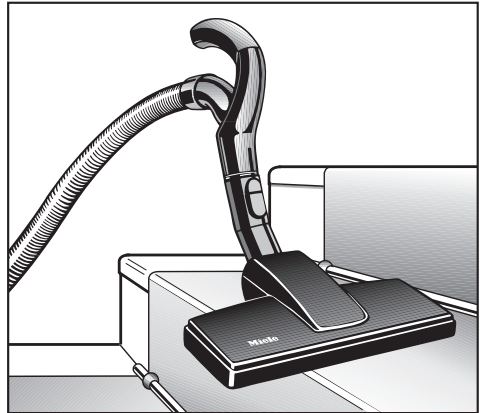


# Use

## Mains cable

### Unwinding the cable


- Pull out the mains cable to the required length (max. approx. 6.5 m).

⚠ If vacuuming for longer than 30 minutes, the mains cable must be pulled out to its fullest extent. Otherwise there is a danger of overheating and damage.

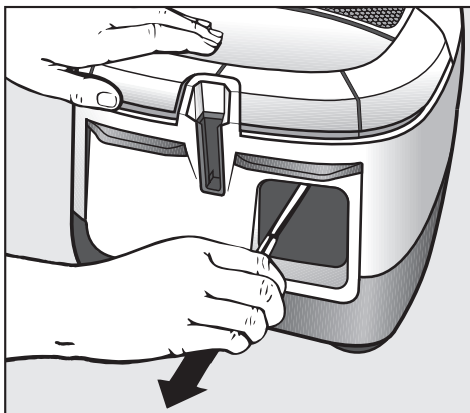

### Rewinding the cable


- Switch off at the wall socket and remove the plug.
- Press the rewind foot switch. The cable will rewind automatically.

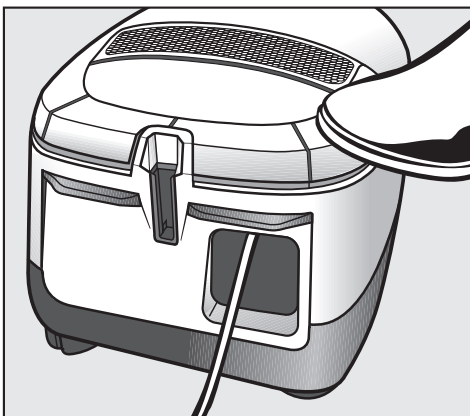

### Switching on and off

- Step on the On/Off foot control ①.

The Standby-by indicator light on the cleaner and the LED on the handle will light up.

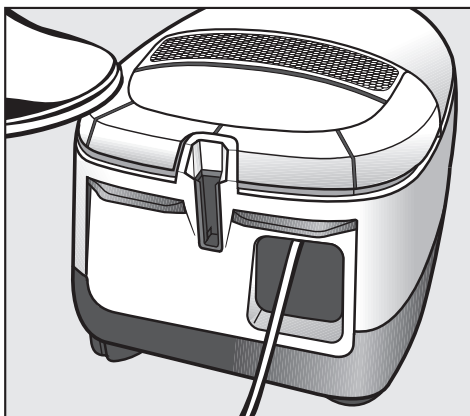



- Press the stand-by button on the handle.

The LED will go out, and the cleaner will switch itself on again at the last selected power level. The corresponding symbol in the handle will light up green.

The lowest power level (Min.) can be directly selected by pressing **-**, and the highest power level (Max.) by pressing **+**.

To pause the appliance during operation:







- Press the Stand-by button on the handle.


The LED on the handle will light up.

## Adjusting the suction power

Use the **+** and **-** on the handle to regulate the suction to suit the type of flooring. The higher the wattage, the more powerful the suction. Reducing the suction power reduces the amount of effort required to manoeuvre the floorhead.

The power settings are denoted by symbols on the handle which indicate the type of use the settings are suitable for.

-  - curtains, lightweight fabrics
-  - upholstery, cushions
-  - carpets, rugs and runners
-  - for daily energy-saving vacuuming
-  - lightly soiled rugs and fitted carpets
-  - heavily soiled hard flooring, and for intensive cleaning of carpets

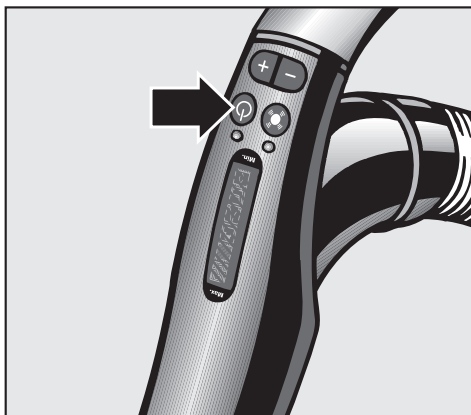

Press and hold the appropriate button until the symbol for the setting you require lights up green.


- Press the **+** button to select a higher setting.
- Press the **-** button to select a lower setting.

# Use


---


## Vacuuming

- When vacuuming, pull the cleaner behind you on its wheels. You can stand it upright for vacuuming stairs and curtains etc.

 When vacuuming especially fine dust, e.g. sawdust, sand, plaster, flour, talcum powder etc., electrostatic charges build up naturally. Under certain conditions these charges will be released. To avoid the unpleasant effects of these discharges, a metal inlay has been incorporated into the underside of the handle. Make sure that you keep your hand in constant contact with this metal strip during vacuuming.

## Switching the Electrobrush on and off

The Electrobrush is switched on separately from the vacuum cleaner by pressing the  button on the handle. This means that you can switch the Electrobrush off during vacuuming and the vacuum cleaner will continue to operate using suction only. This is useful when moving from vacuuming a fitted carpet to a rug, for example.

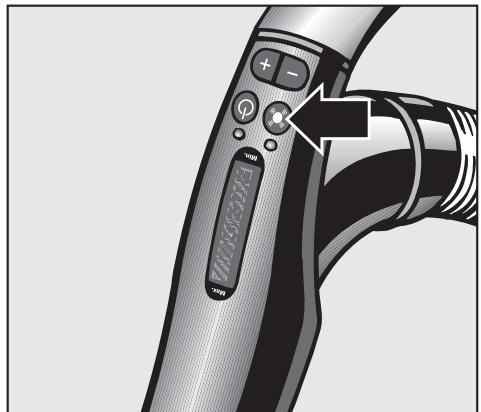

## Parking system


(cannot be used with the SEB 236 Electrobrush)

A Park system has been designed for conveniently parking the suction tube and floorhead during pauses.

- Slot the floorhead into the parking attachment at the back of the vacuum cleaner.

## Switching on and off with the parking system

The cleaner is automatically switched off when the floorhead is placed in the parking attachment. Lifting the floorhead out of the Park system switches the cleaner on again.

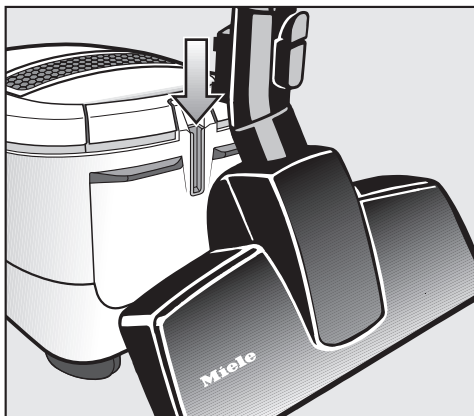

# Setting down, transportation and storage


## Transportation and storage


- Stand the vacuum cleaner upright when it is not being used and during storage.
- Slot the floorhead downwards into one of the parking attachments on either side of the vacuum cleaner (the parking attachments cannot be used with the SEB 236 Electrobrush).
- Retract the electro telescopic tube fully.

This makes the cleaner easier to carry or store.

When using one of the following floorheads, the adapter supplied **A** must be fitted between the floorhead and the electro telescopic tube.


- Standard floorhead
- Turbobrush
- Hard floor brush

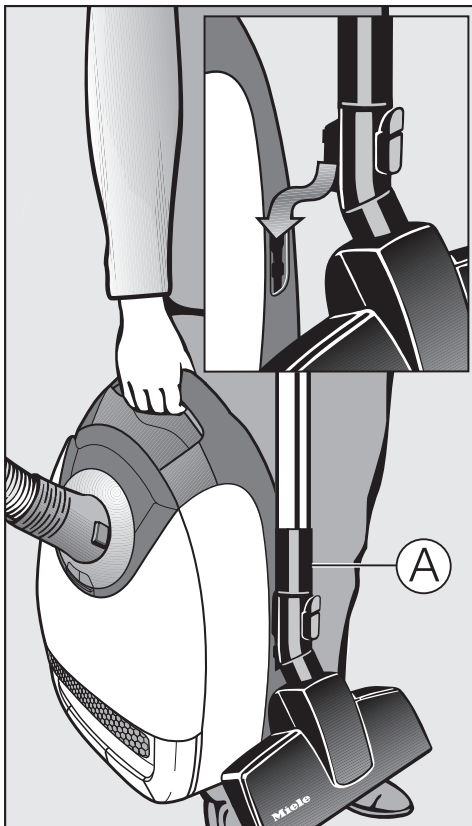

 Always disconnect the vacuum cleaner from the electrical supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.

The Miele filter system consists of three filters which must be replaced from time to time to ensure that your vacuum cleaner performs efficiently.

- Dustbag
- Dust compartment filter (for motor protection)
- Exhaust filter

 To ensure that your vacuum cleaner functions correctly, cleans hygienically and gives you many years of trouble-free operation, please only use genuine Miele approved dustbags and filters. The use of non-Miele approved dustbags and accessories could invalidate your warranty and cause damage to your product.

### Purchasing new dustbags and filters

Replacement dustbags and filters can be obtained from your local Miele Dealer or directly from the Miele Spare Parts Department (see back cover for contact details).

### Ordering the correct dustbags and filters

When ordering dustbags for this cleaner, ask for bags with the code **G/N**.

A dust compartment filter and a Super Air Clean exhaust filter are supplied with every packet of Miele dustbags. If you wish to purchase dust compartment filters or exhaust filters separately, please quote the model number of your appliance when ordering to ensure you get the correct items. Always quote the model number given on the data plate located underneath the appliance.

You can replace the Active HEPA exhaust filter fitted in the vacuum cleaner with one of the other Miele exhaust filters if you wish (see "Optional accessories").

# Maintenance and care


## When to change the dustbag

Change the dustbag when the colour marker in the dustbag change indicator fills the display, or sooner if it is no longer effective (see possible reasons for this below).

Miele dustbags are disposable, and designed for single use only. Do not attempt to re-use them as suction would be reduced.

## Checking the dustbag change indicator

- Attach the standard floorhead to the suction tube. Do not use any of the other floorheads or attachments as they will cause the dustbag change indicator to give a false reading.
- Switch on the vacuum cleaner using the On/Off foot control ①, and select the highest power setting on the handle.
- Lift the floorhead off the floor a little. If the marker completely fills the dustbag change indicator, you should replace the dustbag with a new one.

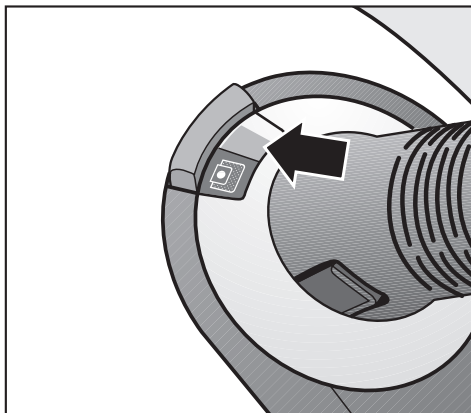

## How the dustbag change indicator works


The dustbag change indicator is set for normal household dust. Normal household dust would contain a mixture of dust, hair, carpet fluff, threads, grit etc.

However, if the vacuum cleaner has been used to suck up fine dust, such as plaster, brick dust, cement or flour, the pores of the dustbag will become blocked very quickly. This affects the air permeability of the bag, and the marker will indicate that the bag is "full" even when it is not. If this happens you must still change the dustbag because suction power will be greatly reduced by blocked pores in the dustbag.

If, on the other hand, you have vacuumed up a large amount of hair and carpet fluff which typically contains a lot of air, the indicator may fail to react even though the bag is full. You should still change it! Both these extremes can occur.


### Replacing the dustbag

- Lift the release button for the dust compartment lid and raise the lid as far as it will go.

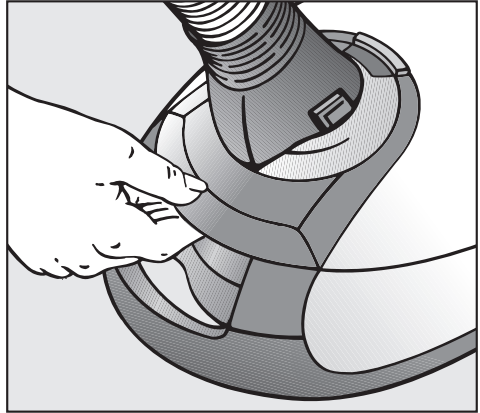



- To remove the dustbag, hold the bag by the collar and pull it out of its holder.

The dustbag has a closing flap which closes automatically when the dustbag is removed to prevent any dust escaping.

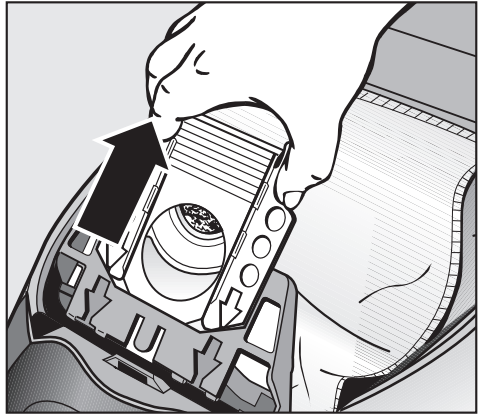

- Fit the new dustbag into the holder as far as it will go. Leave it folded up when you take it out of the box.
- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the dustbag when doing so.

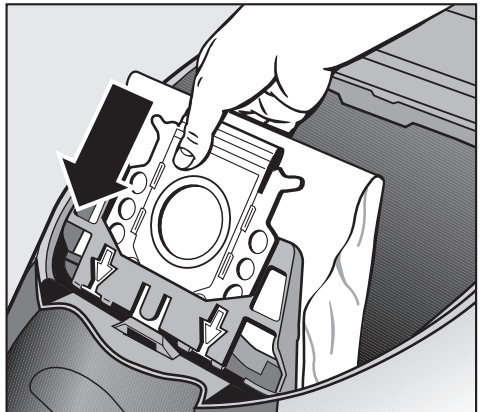

 The lid will not close without a dustbag in place, or if the dustbag is incorrectly fitted. Do not force it!

## Maintenance and care


---

### When to change the dust compartment filter (for motor protection)

Replace this filter every time you start a new packet of dustbags. A dust compartment filter is supplied with every packet of Miele dustbags.

### How to change the dust compartment filter

- Open the dust compartment lid.
- Unclip the filter frame and remove the old filter. Hold by the clean, unsoiled section to remove it.
- Replace with a new dust compartment filter.
- Close the filter frame.

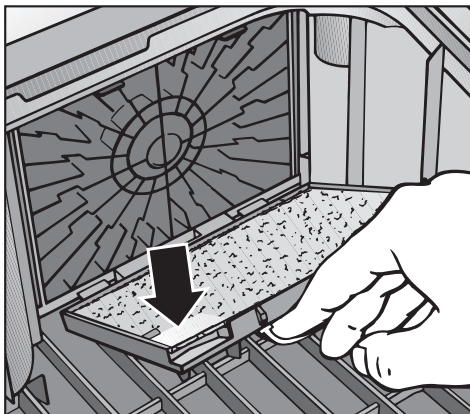




### When to change the exhaust filter

Always change the Active HEPA filter when the exhaust filter indicator lights up. It is designed to light up after approx. 50 hours of operation which is the equivalent to about a year of average use. It should be replaced sooner if it is obviously soiled or no longer effective. The vacuum cleaner can still be used with the exhaust filter indicator lit up. However, the suction power will be reduced as will the effectiveness of the filter if it is not replaced in good time.


You can replace the Active HEPA filter supplied with the vacuum cleaner with one of the other Miele exhaust filters if you wish (see "Replacing one type of exhaust filter with another").

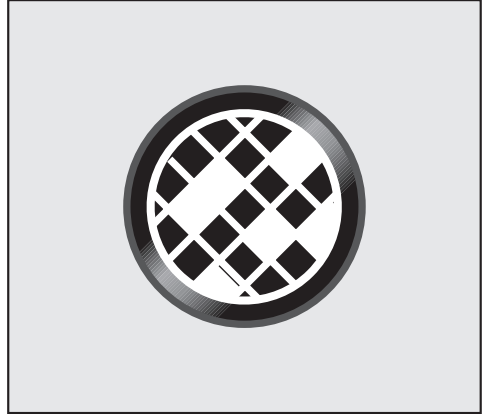


## Maintenance and care

### Replacing the Active HEPA filter

- Open the dust compartment lid.
- Raise the filter and remove it.

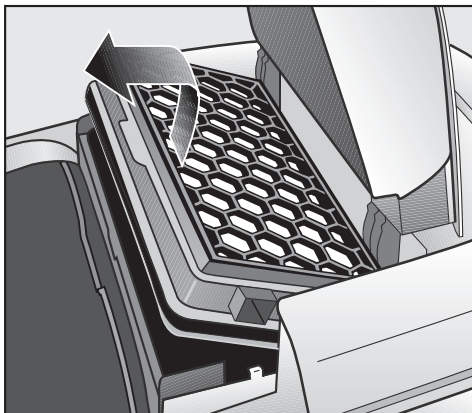

- Replace with a new filter, and push it down into place.
- Close the dust compartment lid firmly. It should click into place.

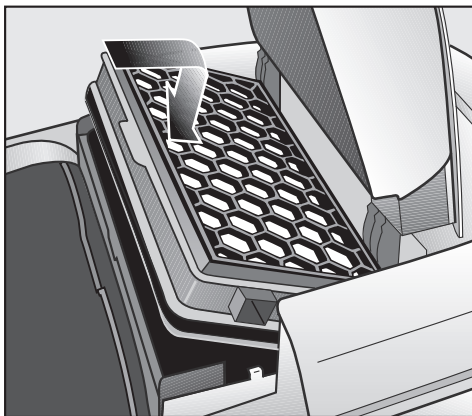


### Resetting the exhaust filter change indicator

The filter change indicator needs to be reset each time the filter is replaced. To do this the vacuum cleaner must be switched on.

- Press the reset button.

The exhaust filter change indicator goes out and resets to zero.

The filter change indicator can only be reset by pressing the reset button after the light has come on. Pressing the button at any other time will have no effect.

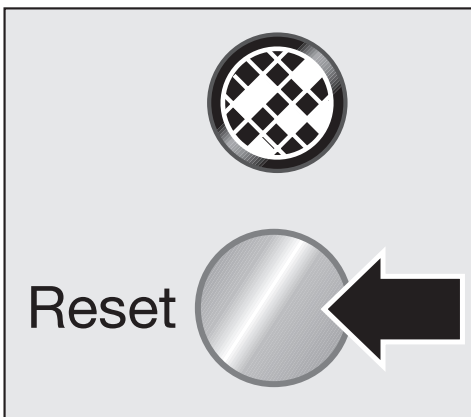


### Replacing one type of exhaust filter with another

You can replace the Active HEPA filter **c** supplied with your vacuum cleaner with one of the following exhaust filters:

- a** a Super Air Clean filter,
- b** an Active Air Clean filter.


The Active Air Clean filter is fitted in the same way as the Active HEPA filter.

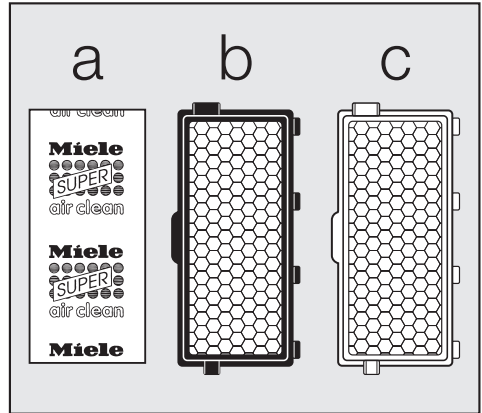


### When replacing an Active HEPA filter with a Super Air Clean filter, please note:

If you wish to replace the Active HEPA filter **c** with a Super Air Clean filter **a**, then it is essential that you also fit the filter grille\*.

\* Filter grille - see "Accessories supplied".

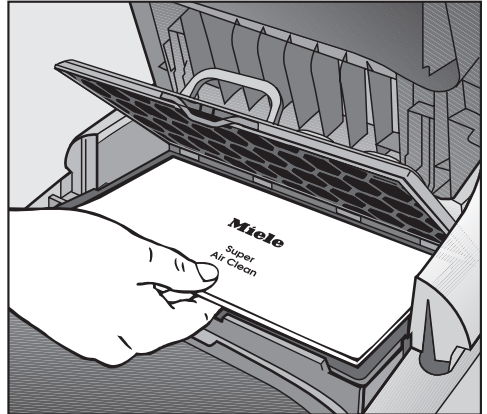

The exhaust filter indicator light (with reset button) is designed to come on when the Active HEPA or Active Air Clean filter needs to be changed. The filter change indicator light is irrelevant if a Super Air Clean filter is being used, as long as it is replaced every time a new packet of Miele dustbags is started. The exhaust filter change indicator will go out when the reset button has been pressed.

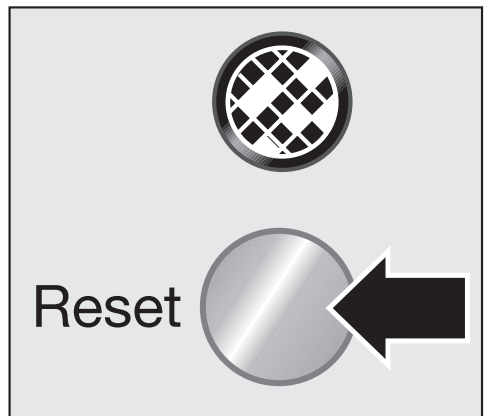

# Maintenance and care

---


## When to change the thread lifters

The thread lifters on the suction inlet to the floorhead and the upholstery nozzle can be replaced.

Check them from time to time and replace them if the pile has worn down.

## To replace the thread lifters

- Use a knife or similar object to remove them from the slots.
- Fit new thread lifters.

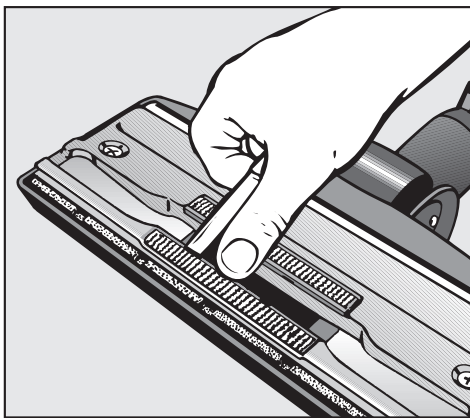



## If threads or hair have wound round the bearing on the floorhead roller:

- ① Release the bearing (with bayonet fitting) using a coin.
- ② Press the bearing out, and remove.
- ③ Take out the roller.

Remove any threads and hair, replace the roller and refit the bearing.


Spare parts are available from your Miele dealer or from the Miele Spare Parts Department (see back cover for contact details).

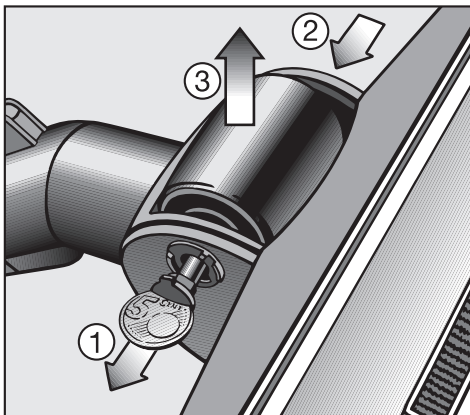

 Always disconnect the vacuum cleaner from the electricity supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.


## Vacuum cleaner and accessories

External surfaces of the vacuum cleaner and of the accessories can be cleaned with a dry or a slightly damp cloth, or with a proprietary cleaner suitable for plastic.

 Do not use abrasive cleaners, glass cleaners or all-purpose cleaners. Because of their chemical composition they could cause serious damage to plastic components.

## Dust compartment

The dust compartment can, if necessary, be cleaned using a **dry** duster, brush or, if available, a second vacuum cleaner to vacuum the dust out.

 Do not let the vacuum cleaner get wet. If moisture gets into the appliance, there is a risk of electric shock.

## E-Cloth


A microfibre "E-Cloth" is available from the Miele UK Spare Parts Department, which is suitable for cleaning surfaces such as stainless steel, glass, plastic and chrome without the use of chemicals. It can be washed 300 times.

## Problem solving guide / After sales service

---

### **The vacuum cleaner switches off automatically, and the overheating warning light comes on.**

A temperature limiter switches the vacuum cleaner off automatically if it gets too hot. The overheating warning light will then come on to indicate that it has overheated.

This can occur if, for instance, large articles block the suction tube or when the filter bag is full or contains particles of fine dust. A heavily soiled exhaust or dust compartment filter can also be the cause of overheating. Switch the vacuum cleaner off immediately using the On/Off foot control . Disconnect from the electricity supply. Switch off at the wall socket and remove the plug.

After removing the cause, wait for approx. 20 - 30 minutes to allow the vacuum cleaner to cool down. It can then be switched on again.

### **After sales service**

In the event of a fault that you cannot easily remedy, please contact

- your Miele dealer, or
- the nearest Miele Service Department (see address on back page).

Please note that telephone calls may be monitored and recorded for training purposes.



Certain models are supplied as standard with one or more of the following accessories:

Important: please observe the flooring manufacturer's cleaning and care instructions.


### **Turbobrush**

The Turbobrush is particularly suitable for vacuuming cut-pile carpeting, and is operated by the suction power of the vacuum cleaner. It has a rotating brush and is very effective at picking up thread, hairs and fluff.



### **Hand-held Turbobrush**

The hand-held Turbobrush is intended for vacuuming upholstery, mattresses, car seats, carpeted stairs and other areas inaccessible to the standard Turbobrush.

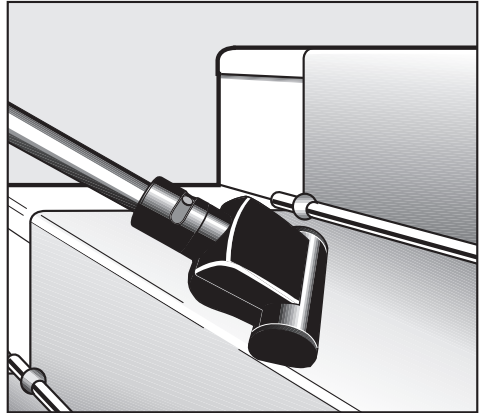

### **ALLERGOTEC floorhead**

The level of cleanliness of the floor shows in a colour "traffic light" display when vacuuming. The ALLERGOTEC floorhead is designed specially for the daily hygienic cleaning of all floor surfaces.




## Optional accessories

---

### **SBB 235-3 Hard floor brush**

This brush is designed for use on hard flooring such as tiled or stone floors.

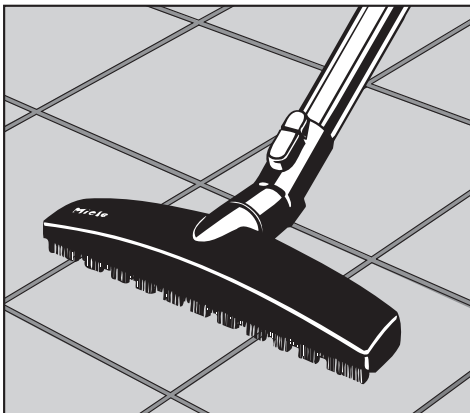


### **Parquet 3 floor brush**

This brush has natural bristles and is designed for use on parquet floors and other surfaces which are susceptible to scratching such as laminate flooring.



### **SBB 300-3 Hard floor brush**

Suitable for all types of hard flooring, and particularly good for accessing awkward corners and niches.

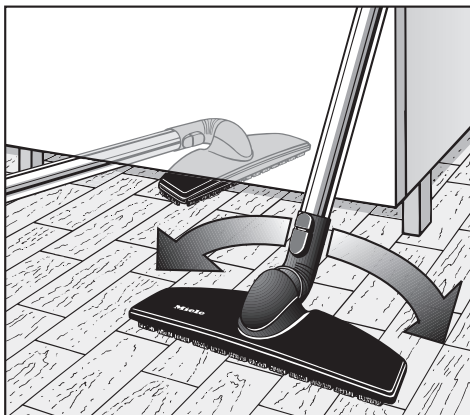



### Universal brush

For dusting books, shelves, etc.



### Mattress nozzle


For cleaning upholstery, mattresses, cushions, curtains, covers etc.



### Radiator brush

(Can only be used if attached to the crevice nozzle).


For cleaning radiators, narrow shelves and crevices.

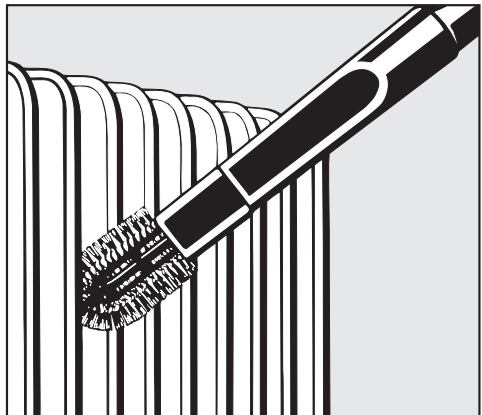

## Optional accessories

### Crevice nozzle (300 mm)

For cleaning in folds, crevices or corners.

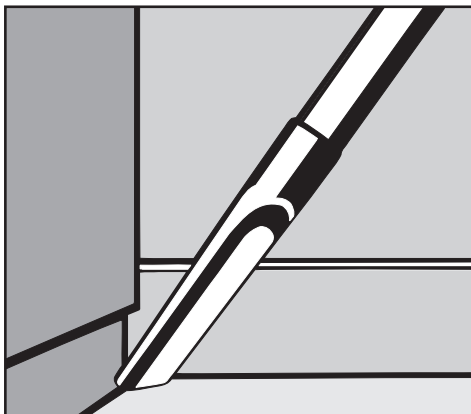


### Micro Set

This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, intricately carved furniture and ornaments, models etc).

It consists of:

- Micro-hose with combination nozzle (crevice nozzle and dusting brush)
- Micro dusting brush
- Micro crevice nozzle
- Angled extension

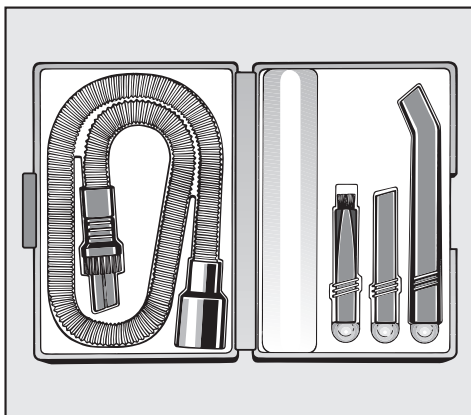

### Hygiene seal with active charcoal


This prevents dust and odours from escaping when the electro suction hose is removed for transportation or storage.

It can be secured to the electro suction hose during vacuuming.

### Active Air Clean filter

A special active charcoal filter, which removes odours coming from the dirt in the dustbag, keeping unpleasant smells to a minimum. The Active Air Clean filter replaces the filter fitted in the vacuum cleaner.

Do not use aroma capsules in your cleaner if you use either of these filters. The charcoal in them will absorb their aroma, rendering them ineffective.

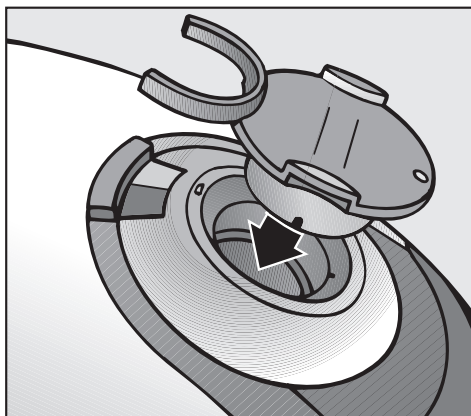

All electrical work should be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations (BS 7671 in the UK).

The voltage and connected load are given on the data plate located underneath the vacuum cleaner. Please ensure that these match the household mains supply. The fuse rating is quoted on the plug.

The appliance is supplied with a cable and moulded plug ready for connection to a 230-240 V/50 Hz a.c. single phase supply.

## **Non-rewireable plugs BS 1363**

The fuse cover must be re-fitted when changing the fuse, and if the fuse cover is lost the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug, (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

**United Kingdom:**

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Tel.: (01235) 554455  
Fax.: (01235) 554477  
Service Office Tel.: (08707) 554466  
E-mail: [info@miele.co.uk](mailto:info@miele.co.uk)  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

**Ireland:**

Miele Ireland Ltd.  
Broomhill Road, Tallaght, Dublin 24  
Tel: (01) 46 10 710, Fax: (01) 46 10 797  
Email: [info@miele.ie](mailto:info@miele.ie)  
Internet: <http://www.miele.ie>

**Australia:**

Miele Australia Pty. Ltd.  
A.C.N. 005635398  
1 Gilbert Park Drive  
Knoxfield, VIC 3180  
Telephone: (03) 9764 7100  
Fax: (03) 9764 7129  
Internet: [www.miele.com.au](http://www.miele.com.au)

**Distributor New Zealand:**

Steelfort Engineering Company. Ltd.  
500 Rangitikei Street  
Palmerston North, Priv. Bag 11045, NZ  
Telephone: (06) 350 1350  
Fax: (06) 356 1507

**South Africa:**

Miele (Pty) Ltd  
63 Peter Place  
Bryanston 2194  
P.O. Box 69434  
Bryanston 2021  
Tel.: (011) 548 1900  
Telefax (011) 548 1935  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)  
Internet: [www.miele.co.za](http://www.miele.co.za)

**Singapore:**

Miele Southeast Asia  
Miele Pte. Ltd.  
163 Penang Road  
# 04 - 02/03 Winsland House II  
Singapore 238463  
Tel : +65-67351191  
Fax: +65-67351161  
Email: [infosea@miele.com.sg](mailto:infosea@miele.com.sg)  
Internet: [www.miele.sg](http://www.miele.sg)

**Hong Kong:**

Miele (Hong Kong) Limited  
AIA Plaza, 24<sup>th</sup> Floor  
18 Hysan Avenue  
Causeway Bay  
Hong Kong  
Tel.: (852) 2610 1331  
Fax: (852) 2610 1013  
E-mail: [mielehk@miele.com.hk](mailto:mielehk@miele.com.hk)